

EMERGENCY PROCEDURES

when Degassing Vessel is connected

In case you must leave the COUPP area

1. Close MV-24, MV25, and MV-26 on front flange of Degassing Vessel
2. Close MV-28 on AC-3 and MV-30 on AC-4



3. Turn off heaters (unplug, or flip power switch on variac)
 4. Turn off vacuum pump (unplug or flip power switch)
- DO NOT change states of MV-12 or MV-14**

In case Pressure Relief blows or Experiment is Damaged

Follow steps 1-4 above, then refer to general Emergency Procedure, found here:

<http://coupp-docdb.fnal.gov/cgi-bin/ShowDocument?docid=288>

Contact: Mike Crisler cell: (630) 276-8705 work: (630) 840-4099
Jeter Hall cell: (801) 735-7433 work: (630) 840-6660
Eric Dahl cell: (218) 290-4708 work: (630) 840-5010

v3 Sept 30, 2010